



# VISION PADEL




## UNLOADING MANUAL

This manual contains the unloading process from a truck of a VISION padel court, with glass and turf.

### BEFORE UNLOADING:

1º - As all the parts of the padel court must be unloaded on the playing surface, before unloading, the perfect square where the walls of the court are going to be fixed, has to be marked following these indications: mark a perfect rectangle with measures 20.030 x 10.030 mm. In order to assure that the rectangle is perfect, divide the rectangle in two triangles rectangles, assuring that both hypotenuses measure 22.400mm following the draw below.

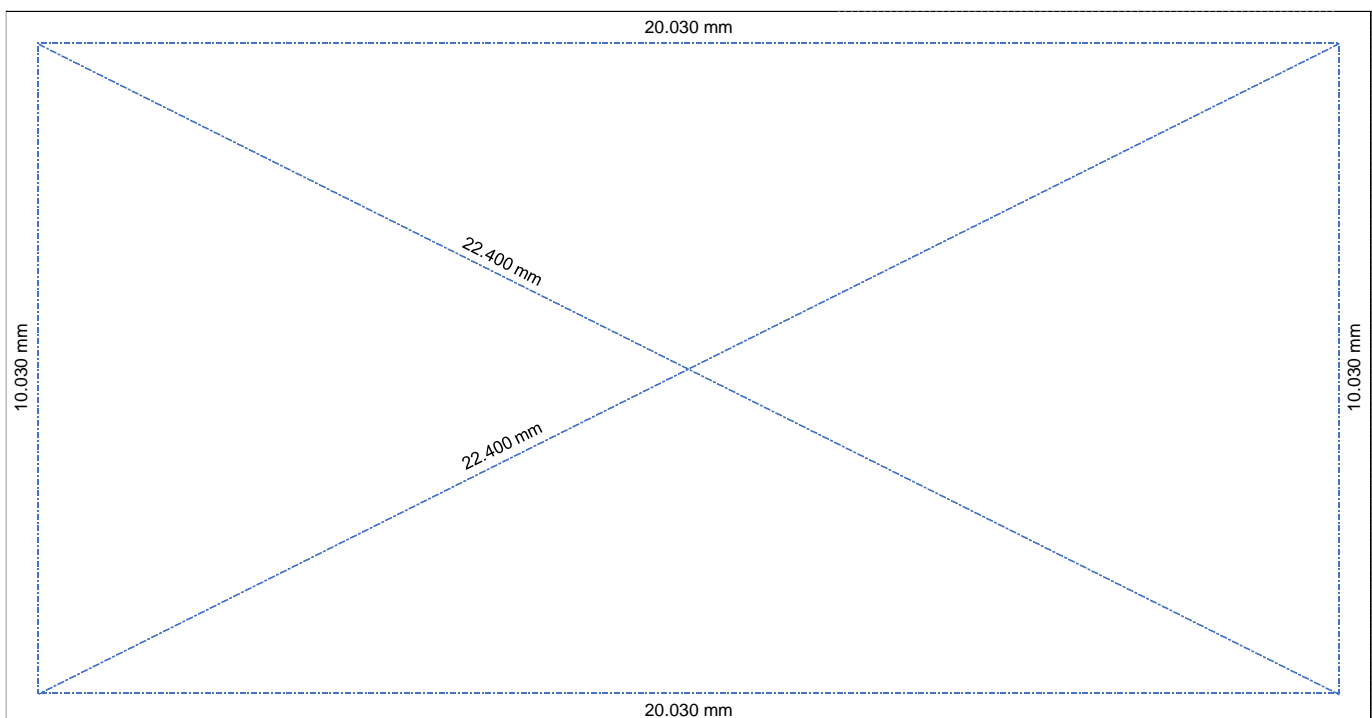

2º - Once the position of the court is limited, proceed with the unloading of the truck, situating all the parts over the marked padel court base, as indicated in last page. This will facilitate the work of the installers, the order in the workplace and also the cleaning

For the unloading process, the truck with the crane should be as closer as possible to the base of the padel court, with the possibility to move packages of 1900 kg from the truck to the base of the padel court.

3º - Tools required for the unloading process:

A) 2 steel wire ropes of of at least 5 meters of length, with a capacity to load at least 1.800kg each one; it is necessary to unload the packages of glasses.




B) A glass storage rack is the best option for the deposit of the glasses; necessary to bear the glasses on the base of the padel court, facilitating the unloading and later the installation. In case of not having any rack, leave the packages of glasses vertically as close as possible to the padel court. A sandbag can also be used to support the glasses (one on each side of the sandbag)

**VERY IMPORTANT: Unload 2 crates of glasses at the base of each padel court, according to the instructions**



C) 1 Chain sling of at least 8mm, with 4 legs, with a minimum length of 3 m per leg; is very helpful for unloading some packages.

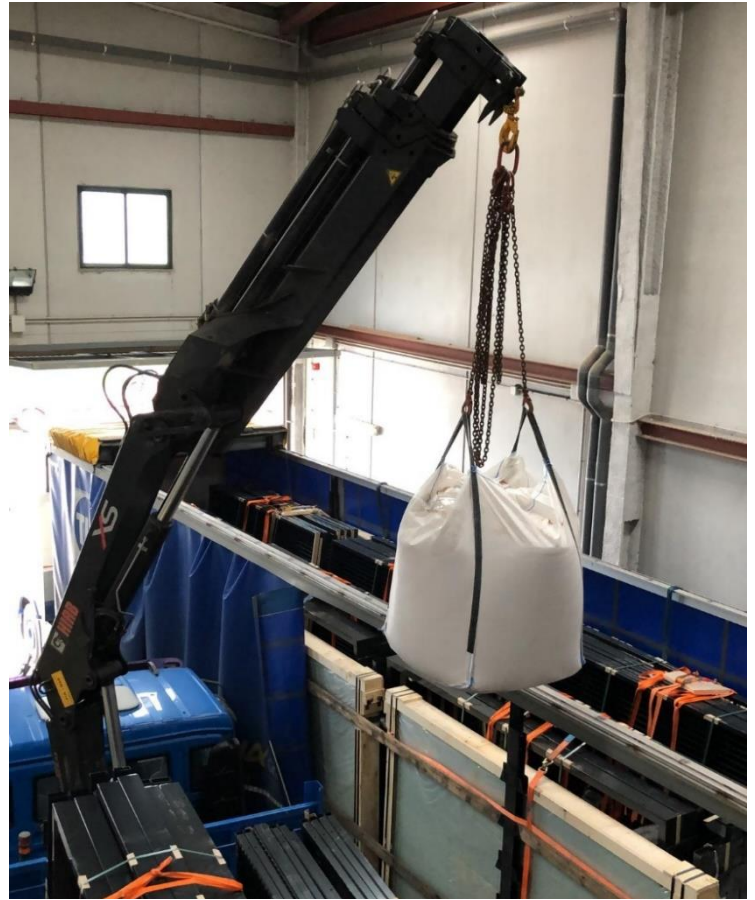

D) Webbing slings (optional):

2 units of 8 meters length with a working load limit of 1500 kg or more each one

2 units of 6 meters length with a working load limit of 1500 kg or more each one


2 units of 2 meters length with a working load limit of 1500 kg or more each one



Note: Glass can also be unloaded with webbing slings

## UNLOADING PROCESS:

1<sup>st</sup> - The first step is to open the truck to see clearly all the cargo

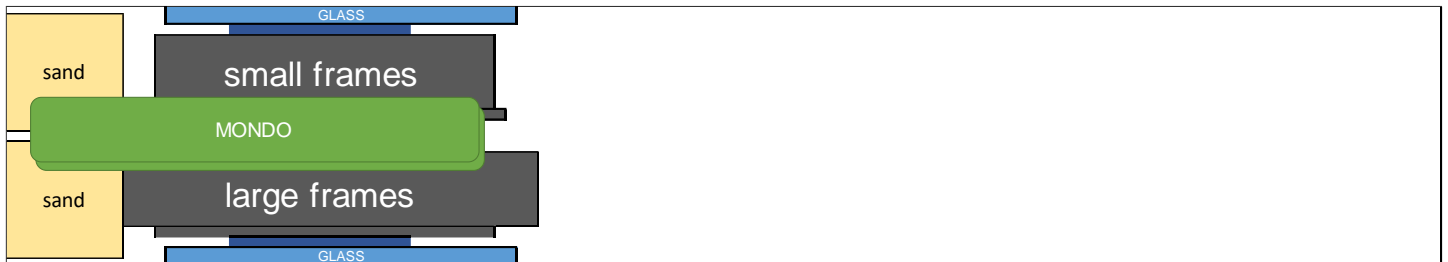

2<sup>nd</sup> – Unload MONDO turf rolls, leaving them inside of the padel court. 4 people and a crane are required



3<sup>rd</sup> – Unload small and large frames, leaving the packages inside of the padel court. 4 people and a crane are required








## WARNING:


- DO NOT UNFASTEN THE RATCHET STRAP BEFORE FIXING THE CRATE OF GLASSES WITH THE STEEL WIRE ROPE (OR WEBBING SLING) TO THE CRANE.
- ALWAYS KEEP FASTEN THE RATCHET STRAP OF THE GLASS CRATES THAT ARE NOT BEING UNLOADED. DO NOT LEAVE IT UNFASTENED. IT IS A HEAVY AND DELICATE OBJECT THAT CAN FALL EASILY
- IF YOU DO NOT HAVE A RACK TO HOLD THE GLASSES, LEAVE THEM RESTING ON THE SANDBAGS, VERTICALLY AS CLOSE AS POSSIBLE TO THE CENTER OF THE PADEL COURT. DO NOT LEAVE THE GLASSES HORIZONTALLY ON THE FLOOR
- IT IS IMPORTANT THAT THE COUNTERSINK HOLES OF THE GLASS LOOKS OUTWARDS (NOT AGAINST THE RACK OR THE SANDBAG)
- ONCE THE GLASSES HAVE BEEN UNLOADED, FASTEN THEM TO THE RACK OR THE SANDBAG WITH A RATCHET STRAP
- DO NOT STOCK ANYTHING OVER THE GLASS
- IMPORTANT NOTE: IF YOU HAVE ANY DOUBT, CALL JUBO PADEL

4<sup>th</sup> – Unload the sandbags, leaving one per court (at least) in the middle of the base over the pallets (to be able to move them later). Important, protect the sand from the rain/water with a plastic cover. 4 people and a crane are required.

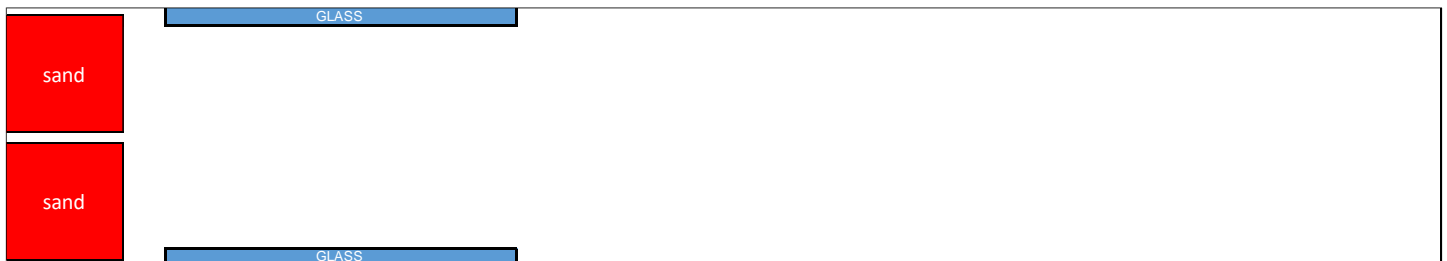

5<sup>th</sup> – Unload crates of GLASSES, leaving them preferably on a rack inside the padel court. 4 people and a crane are required



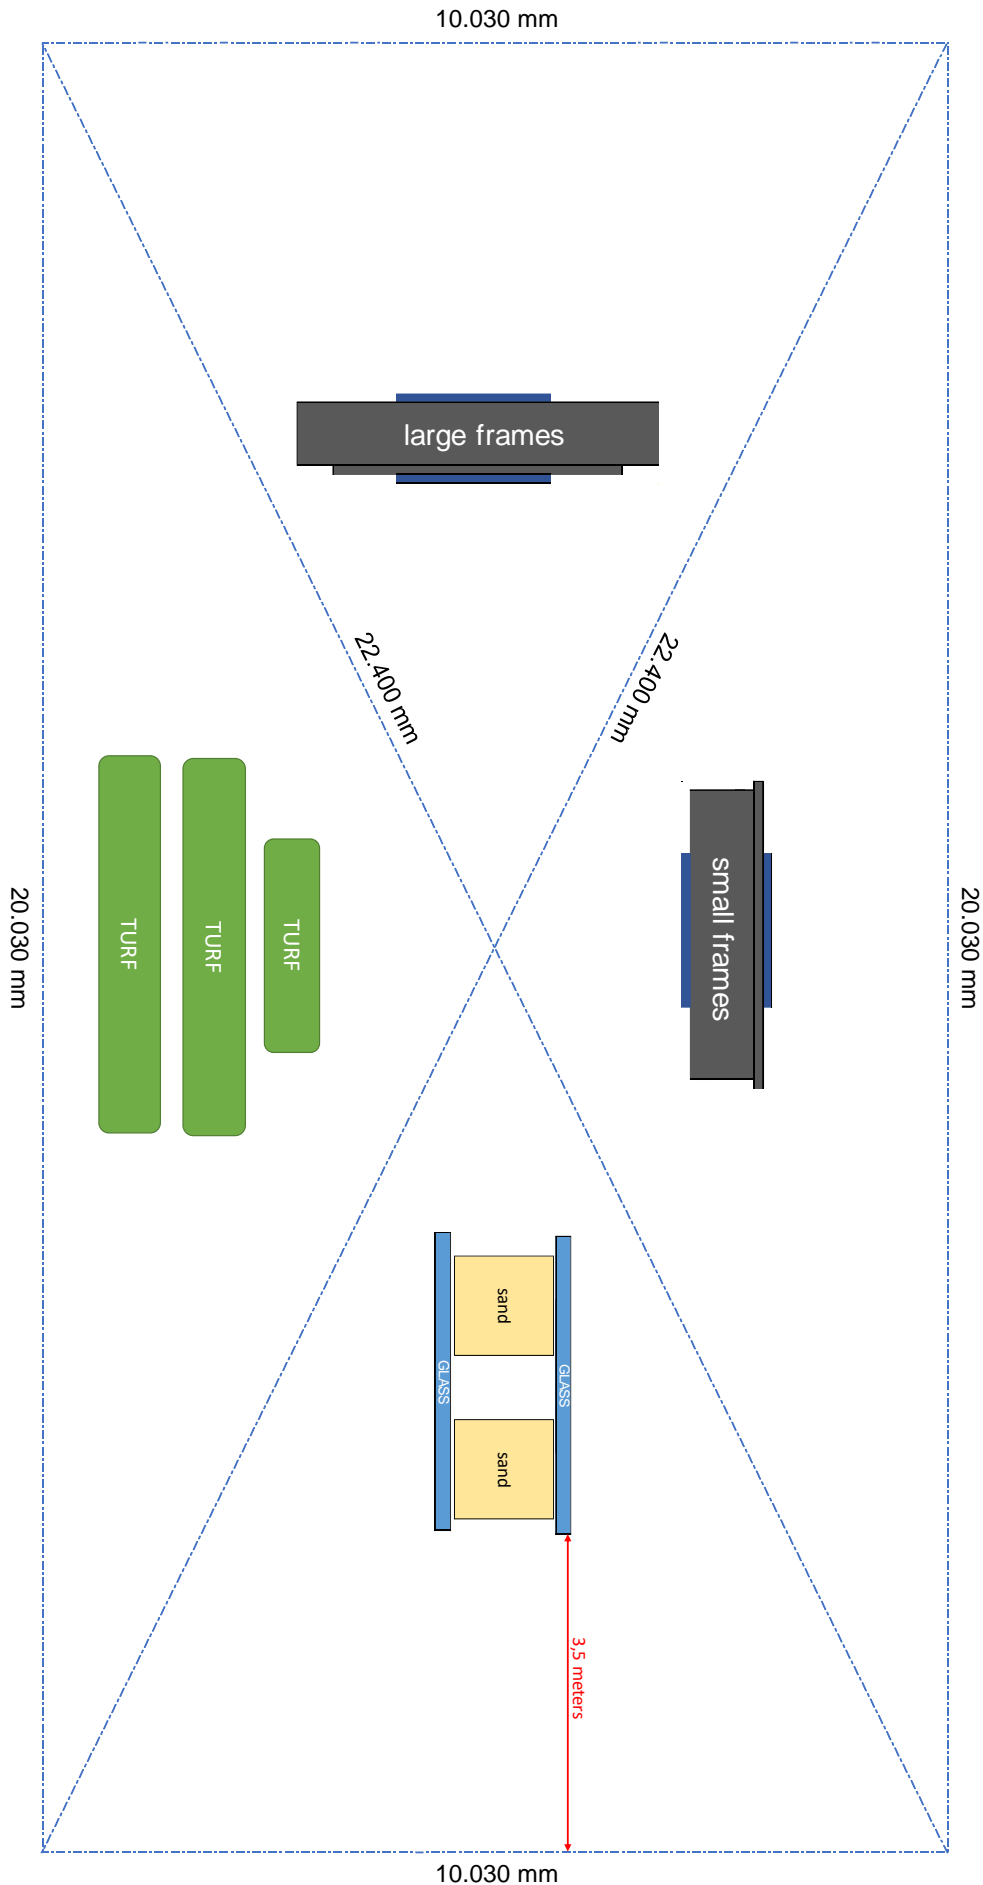

**REQUIRED LOCATION OF THE UNLOADED PIECES OF THE COURT:**